
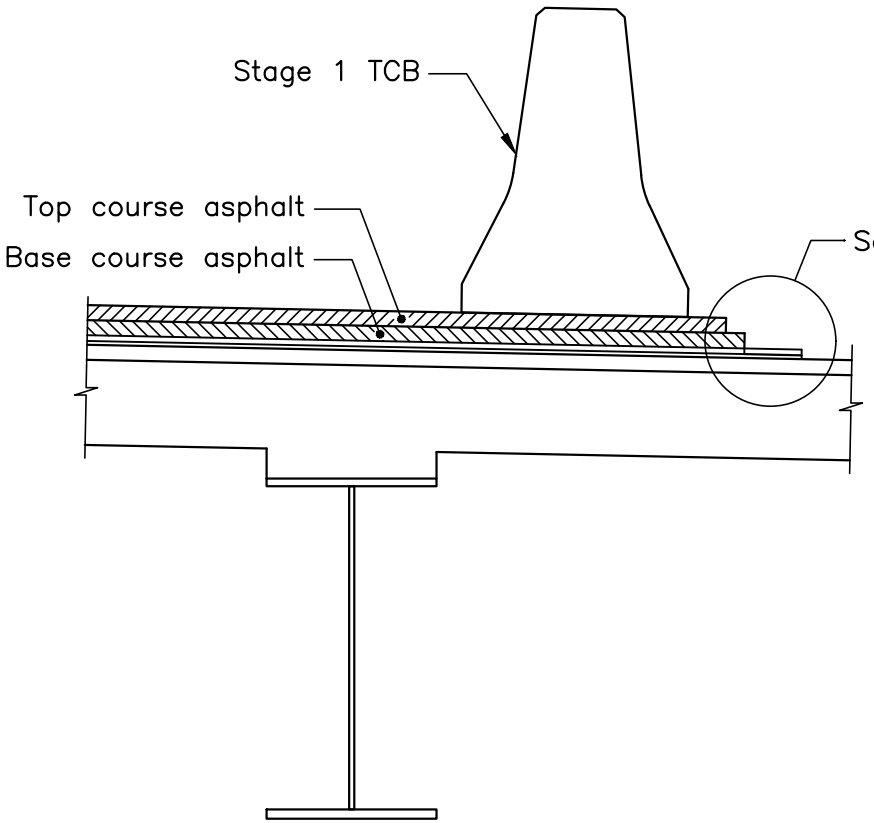


SECTION (TYP)

Stage 1 construction ← → Stage 2 construction

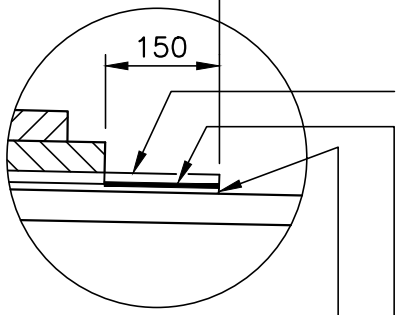

DETAIL A

HRA waterproofing membrane

150mm bond breaker film placed on top of HRA waterproofing membrane (See Note 1)

LEGEND:

HRA – Hot–applied rubberized asphalt waterproofing membrane
TCB – Temporary construction barrier

NOTES:

1. Bond breaker film shall be 3M #5002D or equivalent and shall be placed on top of the HRA waterproofing membrane.

A. 150mm bond breaker film shall be kept in place and protected, until next stage is primed.
B. Once the next stage primer has cured, remove the bond breaker film and protection to expose clean 150mm strip of first stage waterproofing membrane.
C. All dimensions are in millimetres unless otherwise shown.

MINISTRY OF TRANSPORTATION ONTARIO DRAWING	July 21, 2026	Rev	0
DECK WATERPROOFING TRANSITION FOR STAGED CONSTRUCTION AND DISCONTINUTIES	DRAFT		
	MTOD 3370.150		